

What's Included:



 
RDR4330 (black)
Handheld Radio




RDR4360 (black)
RDR4365 (blue)
Handheld Radio




RDR4390 (black)
RDR4395 (blue)
Handheld Radio



B4320Li
Li-Ion Battery
(2000 mAh)

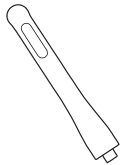

Antenna
ANH4300U - UHF
ANH4300V - VHF

 

BC4300
Belt Clip



PS4301
Power Supply



CH4301
Desktop Rapid
Charger


Attaching the Antenna:



1. Turn the antenna clockwise to attach it.


Note: To remove the antenna, rotate it counter-clockwise.

Attaching the Battery:

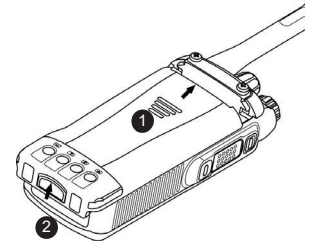


1. While laying flat, put the battery into the radio as ① shown, horizontally push to the top along the aluminum slot.
2. As ② shown, push the battery latch up and slide battery forward until a click is heard.

Removing the Battery:

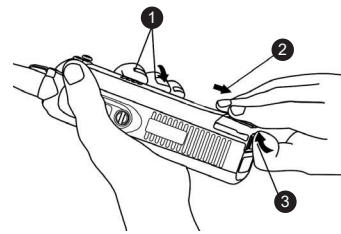


1. As ① shown, hold the radio like this.
2. As ② shown, push the battery latch up with the other hand.
3. Slide the battery as ③ arrow direction shown.

Attaching the Belt Clip:

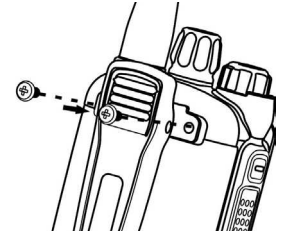


1. Rotate the screws counter-clockwise to remove them.
 2. Align the screw holes on the belt clip with those on the radio's body, then insert and tighten the screws clockwise.
- Note:** To remove the belt clip, loosen the screws.

Attaching audio accessory / programming cable:

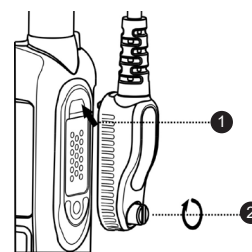

1. Open the accessory jack cover. As ① shown, align the plug with the accessory jack, then connect it.
 2. As ② shown, tighten the screw clockwise on the plug.
- Note:** To remove accessories, loosen the screw counter-clockwise.

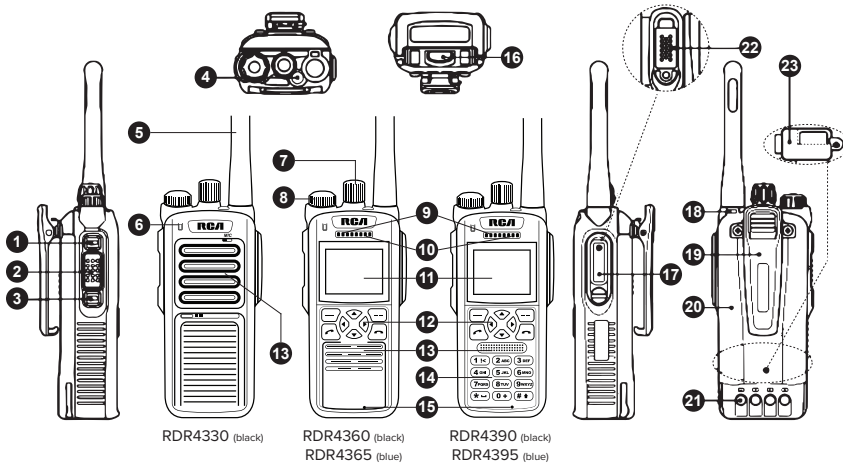

RDR4330 (black)


RDR4360 (black)
RDR4365 (blue)

RDR4390 (black)
RDR4395 (blue)

Product Overview

- | | |
|--|---|
| ① P1 Key (hot key) | ② PTT Key (transmit key) |
| ③ P2 Key (hot key) | ④ Emergency Call Key |
| ⑤ Antenna | ⑥ LED Indicator |
| ⑦ Channel Knob | ⑧ Radio On-Off/ Volume Knob |
| ⑨ Earpiece (RDR4360/RDR4365/
RDR4390/RDR4395 only) | ⑩ Simplex Microphone (RDR4360/
RDR4365/RDR4390/RDR4395 only) |
| ⑪ LCD Display (RDR4360/RDR4365/
RDR4390/RDR4395 only) | ⑫ Function Keypad (RDR4360/RDR4365/
RDR4390/RDR4395 only) |
| ⑬ Speaker | ⑭ Numeric Keypad (RDR4360/RDR4365/
RDR4390/RDR4395 only) |
| ⑮ Duplex Microphone (RDR4360/
RDR4365/RDR4390/RDR4395 only) | ⑯ Battery Latch |
| ⑰ Accessory Jack Cover | ⑱ Strap hole |
| ⑲ Belt Clip | ⑳ Battery |
| ㉑ Battery Pole Piece | ㉒ Accessory Jack |
| ㉓ Micro SD Encryption Card
Cover | |

Function Keypad (RDR4360 / RDR4365 / RDR4390 / RDR4395 models)

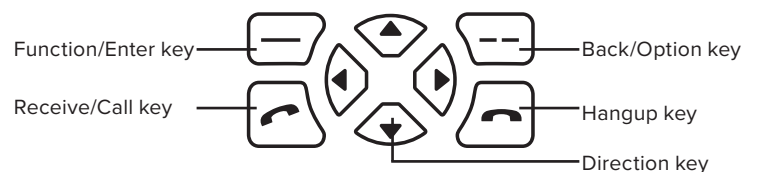


Programmable Keys

[P1] key, [P2] key, four direction keys, [Call] key, can be set as function or menu shortcut keys by your RCA dealer. The default state of [P1] and [P2] shortcuts are for high-low power switching. You only need to press the corresponding shortcut key to quickly access the needed menu or function.

Charging the Battery

Charging Operation Steps

Use only the charger and battery specified by RCA Communications Systems. Charger LED indicates the changing progress.

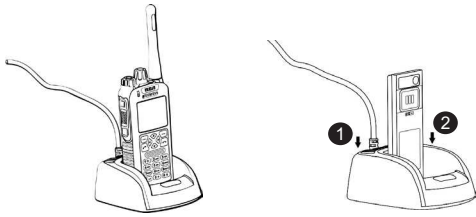

- As ① shown, connect the power adapter to AC power socket and the jack at the back of the charger.
- As ② shown, insert battery or radio with battery in the charger, and make sure there is good contact between battery and charging terminals.
- The charging process starts when LED glows red.
- LED glows green to indicate that charging is complete.

NOTE: The standard 2000mAh battery charging normally takes about 4 hours, for optimal battery performance. Initial charging for new battery should take up to 5 hours.

Basic Operations

Turning on/off radio

Rotate the Radio On-Off/Volume knob clockwise / counter-clockwise until a click is heard to turn on/off the radio.

Adjust the volume

After turning the radio on, rotate the Radio On-Off/Volume knob clockwise to increase the volume or counter-clockwise to decrease the volume.

Selecting a channel

Locate the channel number on the Channel Knob rotate it to select the desired channel. While rotating the knob, there is an automated channel number Voice prompt.

Mode Switch

Through Channel Selector knob. Each channel of the radio can be set as analog channel or digital channel by the dealer. The user can set them up through CPS software.

Call

Group Call

Talk group can be set by the dealer in advance and the operation methods are the same under DMO mode and TMO mode.

• Transmitting a group call

- Select the desired talk group through Channel Knob.
- Hold down [PTT] key to transmit a group call.

• Receiving and replying a group call

You can receive the group call without any key operation. If reply is needed, please hold down [PTT] key after the speech of the other side and then speak to microphone.

Care and Cleaning

To guarantee optimal performance as well as a long service life of your radio, please follow the tips below.

Radio Care

Keep the radio far away from substances that can corrode the electronic circuit.

Do not hold the radio by its antenna or headset cable directly to prevent damage to its normal use.

Attach the accessory jack cover when the radio is not in use.

Radio Cleaning

Clean up the dust and fine particles on the radio surface and charging piece with a clean and dry lint-free cloth or a brush regularly.

Use neutral cleanser and a non-woven fabric to clean the keys, control knobs and front case after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations, so as to avoid surface case damage. Make sure that the radio is completely dry before use.

NOTE: Turn off the radio and remove the battery before cleaning.

LED indicator and charging status in charger

LED Indication	Charging Status
LED Flashes Red Slowly	Standby (no load)
LED Glows Red	Charging
LED Glows Orange	85% Charged
LED Glows Green	Fully Charged
LED Flashes Red Rapidly	Error

Radio LED indicator

LED Indication	Radio Status
LED Glows Red	Transmitting the call
LED Glows Green	Receiving the call
LED Glows Red On Both Sides	Phone Call
LED Flashes Red Slowly	Low Battery Power
LED Flashes Green Slowly	Channel is Idle
LED Glows Orange	Channel is Busy

Battery indicator

Battery Usage Status	Indicator Light Status
Power > 40%	Battery indicator light is off
10% < Power < 40%	Green light flash
Power < 10%	Red light flash
No Power	LED indicator light and battery indicator light off

STATUS INDICATION IN RADIO (RDR4360 / RDR4365 / RDR4390 / RDR4395 models)

LCD Icon

Icon Name	Icon	Radio Status
Battery Strength Icons		Low battery power
		More bars indicate more battery power
RSSI		No Signal
		More bars indicate better signal strength
Message Icons		New message/unread message
		Inbox is full
Operation Mode Icons		TMO mode
		DMO mode
		Analog mode
Power Icons		Transmit with lower power
		Transmit with middle power
		Transmit with high power
Profiles Icon		Silent mode
		Ring
		Vibrate
		Custom
Audio Accessories		Audio accessory has been connected
Call Status Icon		On the phone
Group Selection Icon		Select talk group
Encryption Icon		Encryption ON
Encryption Icon		Encryption OFF / Wrong Encryption Key